

PFAFF

Sachets

Pfaff
creative 2134





Size 20 x 30 cm (8" x 12")

You need:

Sachet 1

- 30 cm (12") Patterned gold-grey-black fabric for upper portion
- 30 cm (12") Black organza for lower portion and drawstring
- 135 cm (53") Black silk ribbon 13 mm (1/2")
- Sewing thread in black
- Embroidery thread in gold
- Tear-away stabilizer
- Marking pen
- Fast turn (optional accessory)

Sachet 2

- 30 cm (12") Grey patterned fabric for upper portion
- 30 cm (12") Grey satin silk for lower portion and drawstring
- Sewing thread in grey
- Embroidery thread in grey
- Tear-away stabilizer
- Marking pen
- Fast turn (optional accessory)

Sachet 3

- 35 cm (14") Black stripe organza for upper portion and drawstring
- 25 cm (10") Beige patterned fabric for lower portion
- Matching sewing thread in beige and black
- Machine embroidery threads in silver, gold and black
- Tear-away stabilizer
- Marking pen
- Pfaff creative smart card 313 "Modern", motif 15
- Fast turn (optional accessory)

1. Cutting

1 cm (3/8") seam allowance included

For all three sachets cut:

The upper portion	2 – 22 x 29 cm (8 5/8" x 11 1/2")
The lower portion	1 – 22 x 24 cm (8 5/8" x 9 1/2")
Drawstring	1 – 4 x 45 cm (1 5/8" x 18")

2. Sewing

Embellish the lower portion

Sachet 1

- Cut the black silk ribbon 13 mm (1/2") into 6 – 22 cm (8 5/8") lengths.
- Lay the black organza on the tear-away stabilizer. Place and pin the black silk ribbon on top of the black organza as shown in the layout diagram.
- Program your own sewing sequence in your Pfaff creative 2134 sewing machine. (Refer to your owner's manual for programming a sewing sequence.) We combined stitch # 45, 74 and 75 from the Pfaff creative 2134. Embellish the ribbons with your sewing sequence using the gold embroidery thread.

Sachet 2

- Mark diagonal lines on the lower portion fabric with your marking pen. The spacing between the lines is 1,5 cm (5/8").
- Lay and pin the fabric on tear-away stabilizer.
- Thread your Pfaff creative 2134 with grey embroidery thread. Sew the lines with a decorative stitch. We used stitch # 11 on the Pfaff creative 2134.
- Set up your Pfaff creative 2134 for a single stitch. Sew stitch # 93 in the squares as shown in the layout diagram using the grey embroidery thread.

Sachet 3

- Mark the placement for the embroideries (front and back) on the beige patterned lower portion as shown in the layout diagram.
- Insert creative smart card 315 "Modern" in your Pfaff creative 2134 and select design # 15.
- Hoop the fabric with tear-away stabilizer. Thread your Pfaff 2134 with embroidery thread and embroider the designs. Use silver, gold and black embroidery threads.

3. Finishing

- Remove the tear-away stabilizer from the embellished lower portion.
- **Sew the upper and lower portion together.** Thread your Pfaff creative 2134 top and bobbin with sewing thread. Place the short edges of the upper and lower portions right side together. Sew together with a straight stitch.
- **Mark the casing.** Using a marking pen draw the casing stitching lines. Measure 15,5 cm (6 1/4") from the upper edge and 1,5 cm (5/8") below that line.
- **Sew the sides together.** Fold the sachet in half right sides together and sew the sides together with a straight stitch. Leave 1,5 cm (5/8") open where the casing will be formed. Turn right side out.
- Fold the upper edge 1 cm (3/8"), wrong sides together and press. Fold down 8 cm (3 1/4") more and press. Pin in place. Sew from the right side two straight stitches for the casing for the drawstring as marked.
- **Sew the drawstring.** Fold the strip 4 cm (1 5/8") lengthwise, right sides together and sew together with a straight stitch. Leave short edges open. Trim the seam allowance. Turn right side out with the Fast turn. Press.
- Insert the drawstring in the casing. Sew the short edges together with a straight stitch.





