

Create a new stitch

How many stitches can be created from one stitch pattern?

- from Canada, Betty Biberdorf -



STITCH #1


This will be the base for all stitches in this exercise!

Please attach your USB mouse to your PFAFF® creative vision™ sewing and embroidery machine.


- 1 Open the Stitch Creator program, touching on Stitch Creator icon in the task bar.



- 2 To insert one stitch touch New stitch point. Leave as inserted.
The marking arrows (beneath the Multi-select icon) shows 2/2. It takes two needle entry points to make the first stitch. The larger red square indicates the current position (2/2). Each grid is 1mm.

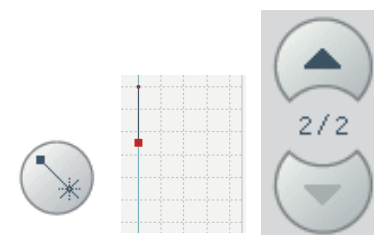

- 3 Touch New stitch point again to insert 3rd needle entry.
Touch and drag on screen to move the stitch point to 1.500/-2.125 or use the wheel for fine tuning the stitch position.

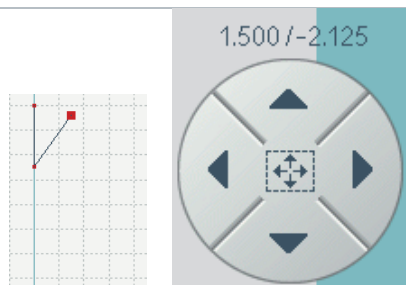


- 4** Touch New stitch point again to set another stitch (4/4).
 Move the New stitch point back to the same position as stitch point #2, i.e coordinates 0.000/2.125.



- 5** Touch New stitch point to set the following stitches:




- a)** Stitch 5/5 - move to 3.125/-1.500

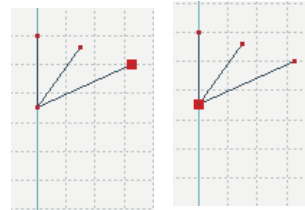

- b)** Stitch 6/6 (back again)
 - move to 0.000/1.500


Use fine tune wheel if required.

- c)** Stitch 7/7 - move to 4.500/0.000

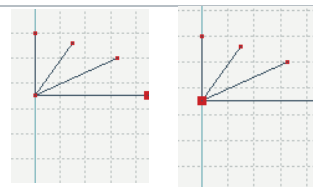


- d)** Stitch 8/8 (back again)
 - move to 0.000/0.000

- e)** Stitch 9/9 - move to 3.125/1.500

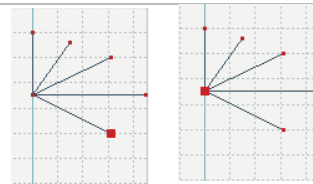


- f)** Stitch 10/10 (back again)
 - move to 0.000/-1.500




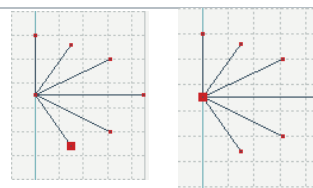



- g)** Stitch 11/11 - move to 1.500/2.125

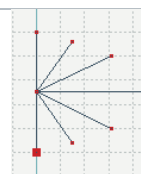

- h)** Stitch 12/12 (back again)
 - move to 0.000/-2.125

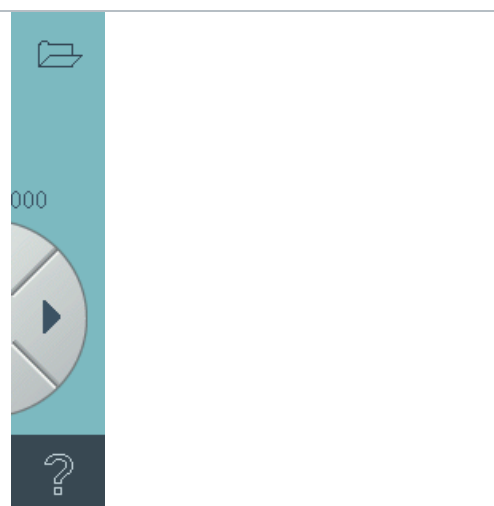
- i)** Stitch 13/13 - move to 0.000/2.500

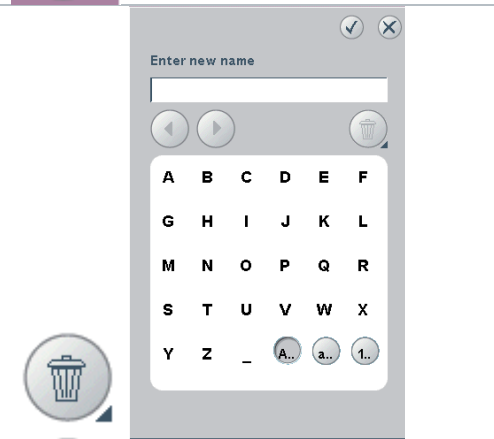

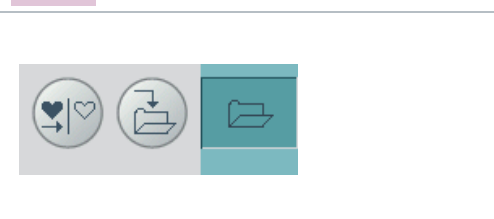- | | |
|--|--|
| <p>6 To save the stitch; touch the file folder in the options bar.</p> |  |
| <p>7 Touch the open folder.</p> |  |
| <p>8 Touch rename.</p> |  |
| <p>9 Long touch on delete to delete the auto generated file name.
Type in a name for the stitch:
"Flower_1"</p> |  |
| <p>10 Touch OK</p> |  |
| <p>11 Touch OK</p> |  |
| <p>12 We would like to save it in the Personal stitch menu as well.
Touch Save to Personal menu (the icon with two hearts).</p> |  |

13

Save it under Personal menu 1 - position 1.
 Touch OK to confirm and close the Save to Personal menu pop-up.

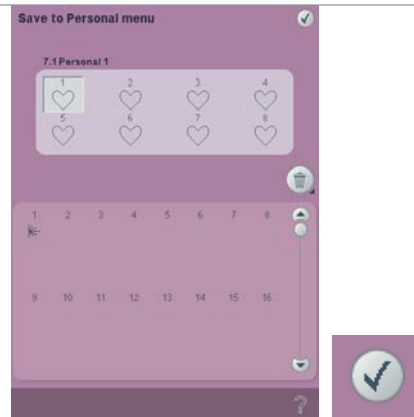

When you save a stitch in your Personal files - you can copy it to your USB Embroidery Stick and/or computer.

When you save a stitch in your Personal Menu - you can easily access it along with all of your stitches through the Stitch Menu.

You can save it in either option or both.

14

To get a full view of the stitch; close Stitch Creator by touching the Stitch Creator icon in the task bar.



How many stitches can you create from this one?
Here are just a few possibilities.....

STITCH #2


15

Touch on Stitch Creator icon again to open up the program once more.




The stitch you just created is still on screen.


- 16 Long touch on Multi-Select to select all.
 Notice the stitch points now have hollow boxes to mark them and the current stitch point is a solid red box. Red indicates marked stitches. Black indicates unmarked.

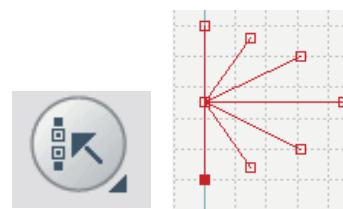


- 17 Touch Duplicate

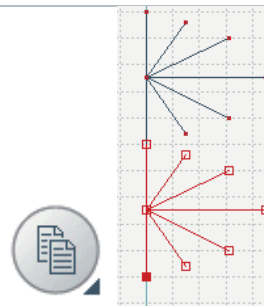

- 18 Touch Mirror Image side to side.

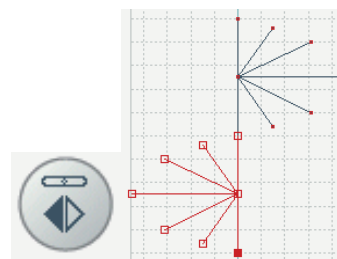

- 19 You have just created a second stitch.
 Save to your Personal menu and select a blank position.
 Touch OK to confirm and close the Save to Personal menu pop-up.

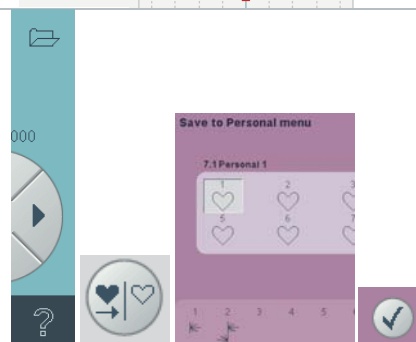


STITCH #3


- 20 Touch Multi-Select to de-select all.
 (Nothing should be marked red)



- 21 Touch the stitch point between the two stitch patterns, or use the scroll arrows to move up to stitch #13/25.
 Selected stitch point will be a red box.

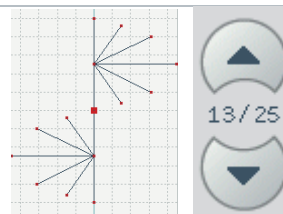

- 22 Touch Delete.

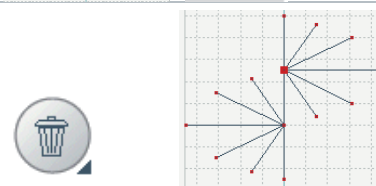

23

To get a full view of the stitch close Stitch Creator, by touching the Stitch Creator icon in the task bar.



24

To get back to Stitch Creator again, touch the Stitch Creator icon in the task bar to toggle back.




25

You have just created a third stitch.

Save to your Personal menu and select a blank position.

Touch OK to confirm and close the Save to Personal menu pop-up.

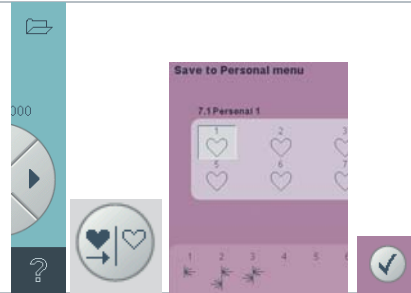

STITCH #4


26

Touch the last stitch point #24/24 or use the marking arrows to scroll to the last stitch point.



27

Touch Delete.

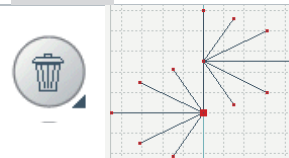

28

To get a full view of the stitch close Stitch Creator, by touching the Stitch Creator icon in the Task bar.



29

To get back to Stitch Creator again, touch the Stitch Creator icon in the task bar to toggle back.




30

You have just created a fourth stitch.

Save to your Personal menu and select a blank position.

Touch OK to confirm and close the Save to Personal menu pop-up.

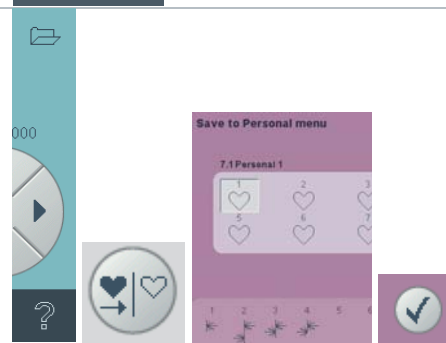

STITCH #5


31

Long touch on Multi-Select to select all.



32

Touch Triple stitch icon to triple all stitches.

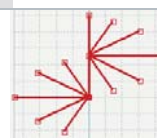

33

To get a full view of the stitch close Stitch Creator, by touching the Stitch Creator icon in the Task bar.




34 To get back to Stitch Creator again, touch the Stitch Creator icon in the task bar to toggle back.



You have just created a fifth stitch.

35 Save to your Personal menu and select a blank position.

Touch OK to confirm and close the Save to Personal menu pop-up.

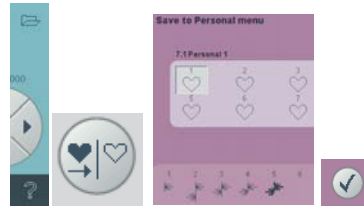


STITCH #6

36 Long touch on Delete to delete all stitch points.



37 Touch OK to confirm.

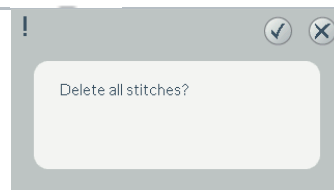


38 You probably have the Personal stitches open in the Stitch Creator. Touch stitch #1 to open the original stitch again.



(38) If you do not have the Personal stitches view open already...
Touch Selection Menu, Stitches, Category 7 - Personal Menu, Subcategory 1



 (38) Touch the original stitch, Flower1.spx
It will appear already marked (red) in the Stitch Creator field.




39 Duplicate




40 Touch Multi-Select to deselect the stitch.



41 Touch the middle-stitch point (#13/25) between the two stitch patterns.

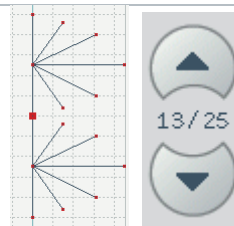

42 Touch Delete to delete the marked stitch point.

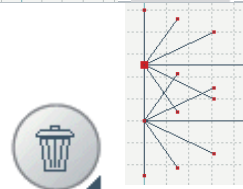


43 To get a full view of the stitch close Stitch Creator, by touching the Stitch Creator icon in the Task bar.



44 To get back to Stitch Creator again, touch the Stitch Creator icon in the task bar to toggle back.




You have just created a sixth stitch.
45 Save to your Personal menu and select a blank position.
 Touch OK to confirm and close the Save to Personal menu pop-up.

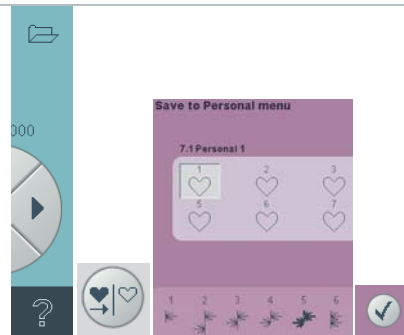

STITCH #7

46 Make sure you are in Stitch Creator and have stitch #6 on screen.


47 Long touch on Multi-select icon to select everything on screen.

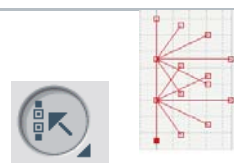


48 Touch Duplicate



49 Touch Mirror image side-to-side

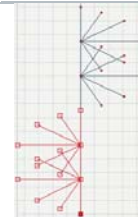

50 Touch and drag on screen to move your duplication to the left of the first stitch.
Coordinates 0.000/-5.000

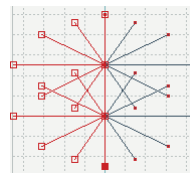

51 To get a full view of the stitch close Stitch Creator, by touching the Stitch Creator icon in the Task bar.




52 To get back to Stitch Creator again, touch the Stitch Creator icon in the task bar to toggle back.



53 You have just created a seventh stitch.

Save to your Personal menu and select a blank position.

Touch OK to confirm and close the "Save to Personal menu" pop-up.

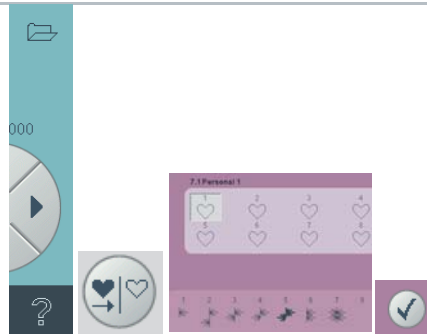

STITCH #8


54 Make sure you are in Stitch Creator and have stitch #7 on screen.

55 Touch Multi-select to deselect all.
Make sure your last stitch is highlighted.




56

Touch Selection Menu,
Select Category 6, Subcategory 1, stitch 1.

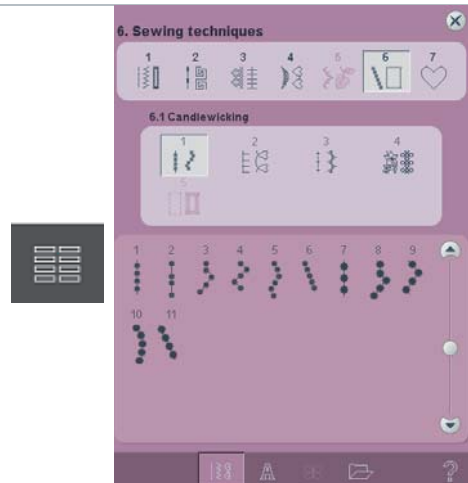


57

Move the candlewicking stitch to the center of
your personal stitch #7.
Coordinates 0.000/-2.750

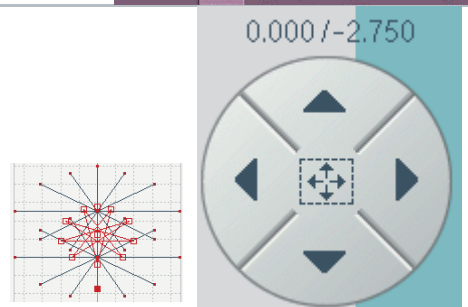

58

To get a full view of the stitch close Stitch
Creator, by touching the Stitch Creator icon in
the Task bar.

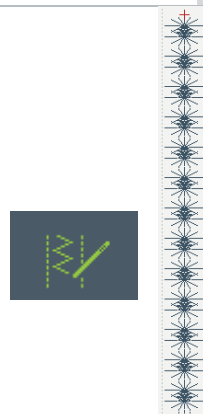

59

To get back to Stitch Creator again, touch the
Stitch Creator icon in the task bar.



60

You have just created a eighth stitch.
Save to your Personal menu and select a
blank position.
Touch OK to confirm and close the Save to
Personal menu pop-up.

