


# Green Evening Bag with Monograms

**PFAFF®**

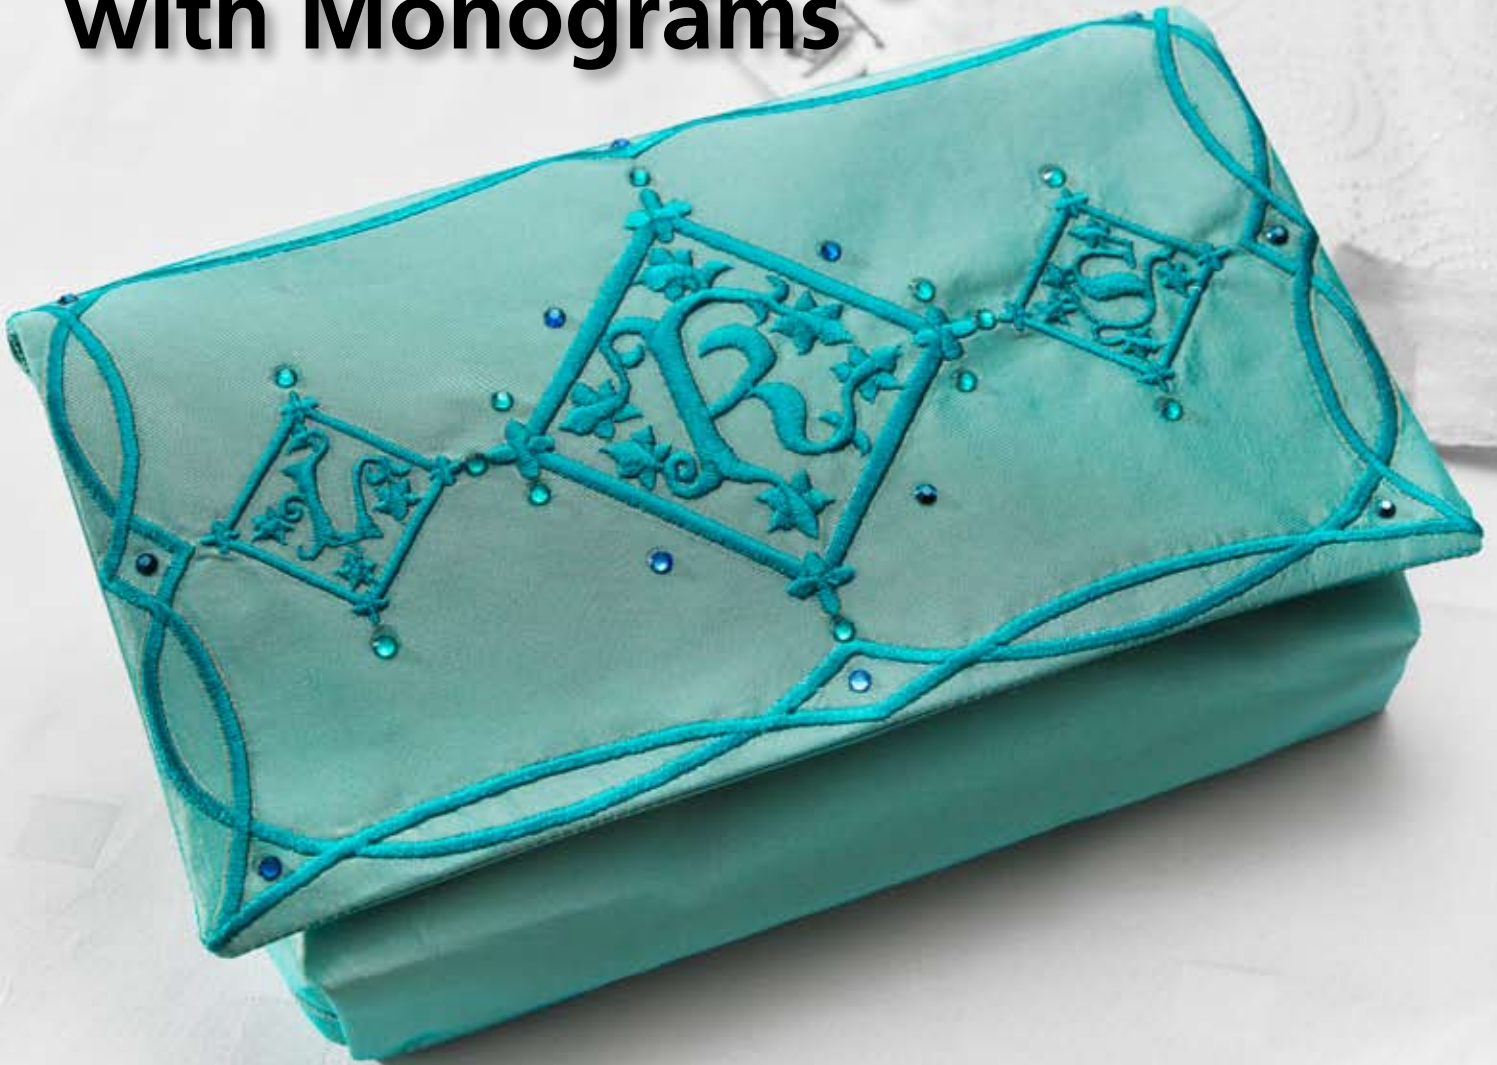

## Sewing supplies

- Green duchesse fabric 16" x 24" (40 x 60 cm)
- Green lining 12" x 20" (30 x 50 cm)
- Fusible interfacing to add more stability to the bag
- Green sewing thread
- Rayon embroidery thread
- Decorative Touch Wand
- Swarovski crystals
- 1 magnetic closure
- Bobbin thread
- Tear Away stabilizer
- Pins

## Pfaff Accessories

- Creative MASTER HOOP® 240 x 150 (9" x 6") #4129685-02

You can find these and many other accessories in the PFAFF® Accessory User's Guide or on our website [www.pfaff.com](http://www.pfaff.com), for purchase at your nearest PFAFF® Dealer.

## Cut

3/8" (1 cm) seam allowance is included in all measurements.

From green duchesse:  
16" x 24" (40 x 60 cm)


From green lining:  
12" x 20" (30 x 50 cm)

From fusible interfacing:  
12" x 20" (30 x 50 cm)

## Embroider

Mark the starting point for the embroidery.

Illustration 1

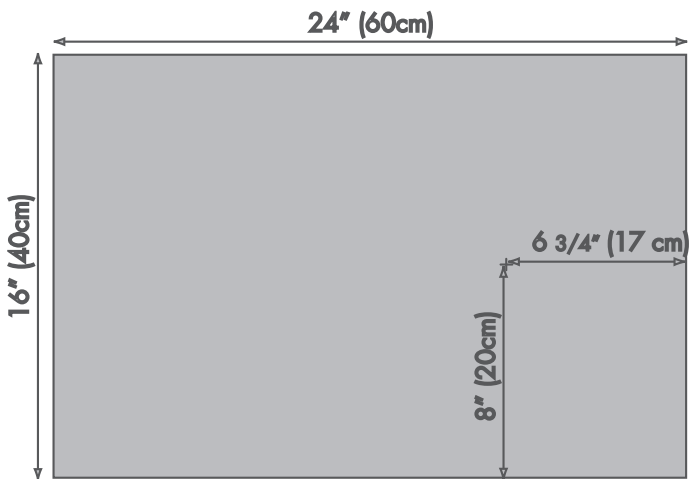


Hoop the fabric in the hoop with tear away stabilizer underneath. Select design and embroider. Tear away the stabilizer.

## Sew

Make a paper pattern piece from tracing paper 12" x 20" (30 x 50 cm). Divide the piece in 3 sections to create a front, back and flap. Place the pattern piece on top of the fabric with the embroidery centered in one of the sections as illustrated. Cut out the bag piece the size of this pattern. Mark the edges of the section lines.

Illustration 2

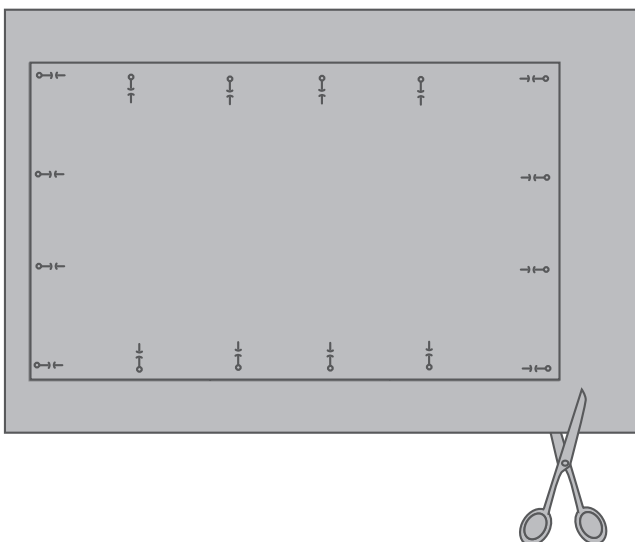


Press the fusible interfacing onto the wrong side. Place the lining right sides together with the front piece.


Thread with sewing thread on top and in the bobbin.

Snap on pressarfoot 1A and engage the IDT.

When you start the sewing machine the straight stitch is already preset. Sew around the pocket flap between the markings. Make a snip in the seam allowance at the ends of seam. Illustration 3




Turn right side out and press. Sew the rest of the bag piece and lining wrong sides together. Touch Overcast on the sewing advisor and overcast the edges. Fold the bag according to the illustration and sew the side seams of the bag with straight stitch. Illustration 4

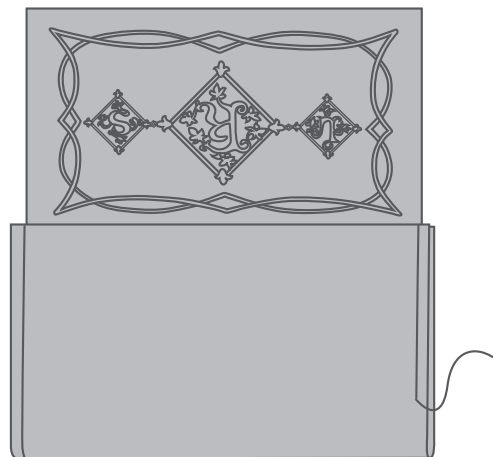

Fold the corners according to illustration and sew the corners. Illustration 5

Turn right side out and press.

Sew the magnetic closure inside the bag flap.

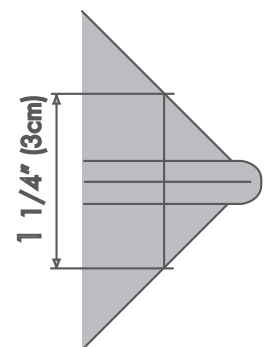

## Embellish

Use the Decorative Touch Wand to put hot fix Swarovski Crystals on the embroidery.

## Finished